



Summarize Columbarium Installation Guide

Helpful Granite Installation Guide Instructions


1. Have your local cement contractor pour your cement slab.
 - a. Note: We do not release specs because it is geographically determined by your contractor

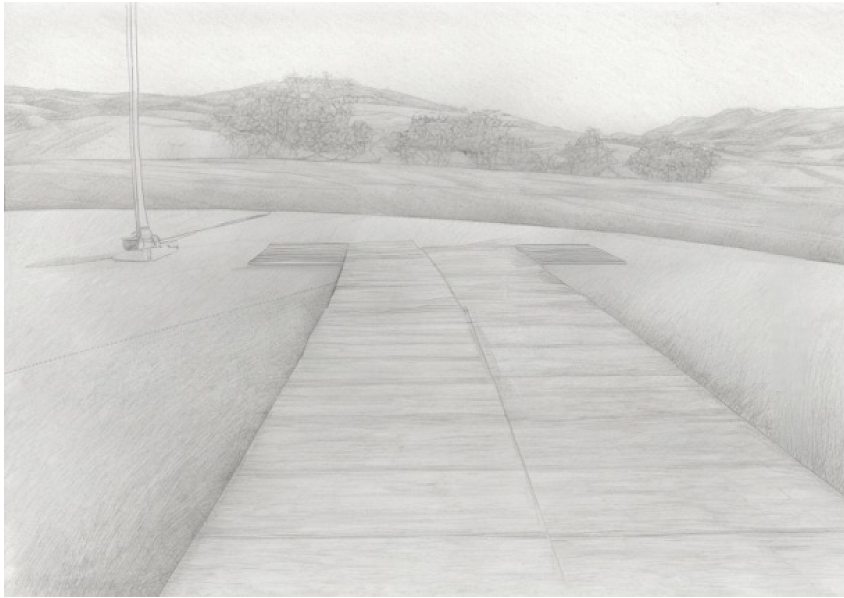


2. After the cement has hardened, you need to purchase plywood and set into place where the wheel will drive so the crane, and forklift will not markup or stain your new cement pad

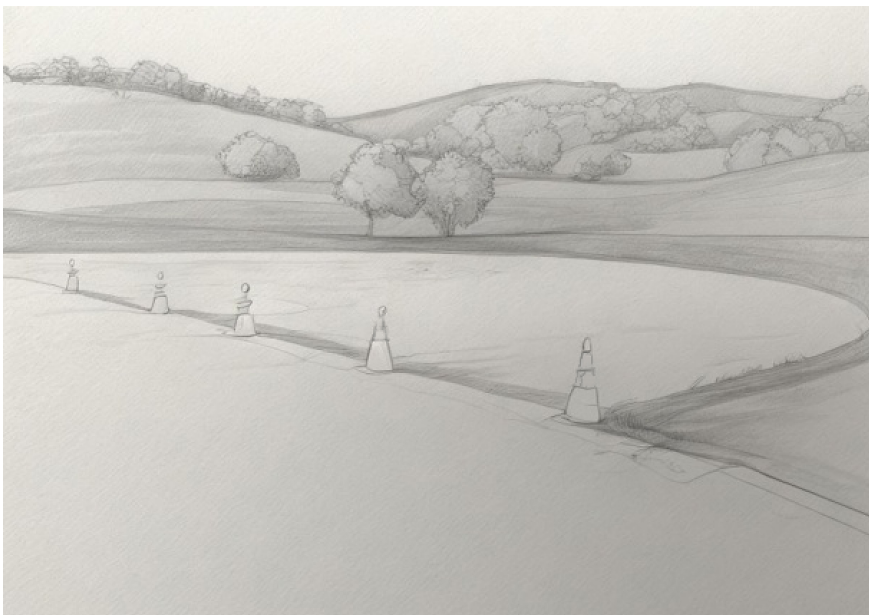


3. Use a crane that has a deck, so the columbarium sits on the crane while the crane is being moved to the correct placement
4. Remove the protective rubber under-liner that is below the columbarium. This is for the lifting straps to be attached.

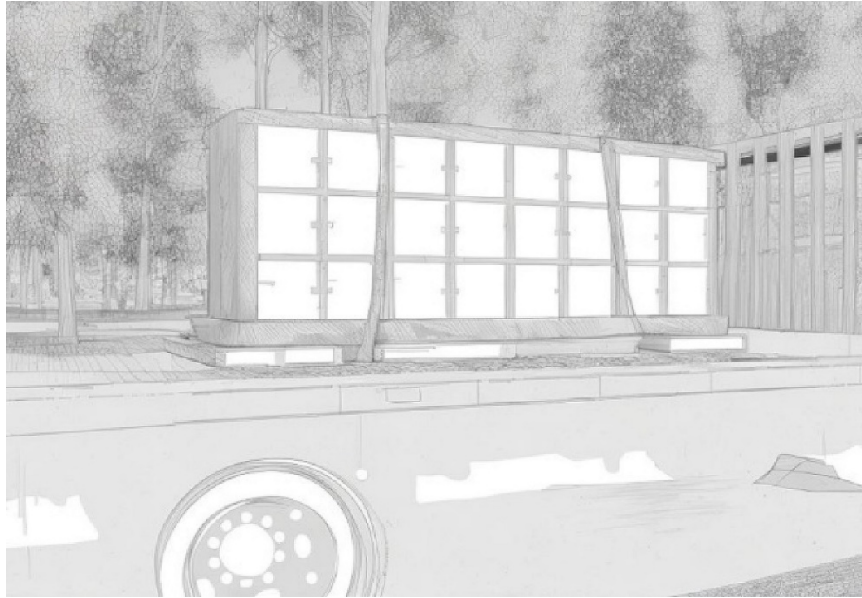


5. The pallets we use for shipping are helpful to allow the straps to be attached.
6. The columbarium typically sits in the front of the crane after it has been removed from the shipping pallet.
 - a. Note: You need wood slats on the crane base pad so that the columbarium does not sit flat on the crane platform

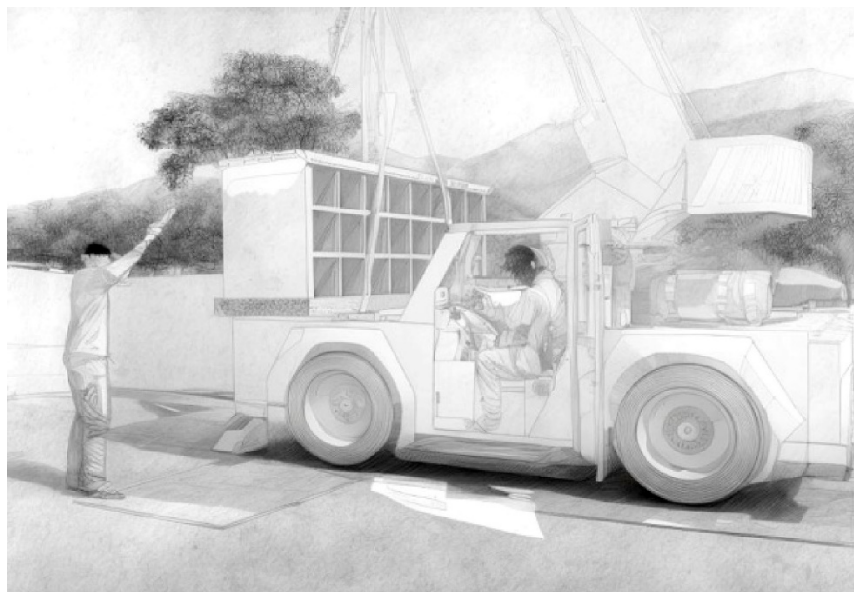

7. Move the crane to the exact position where the columbarium will be placed
 - a. Note: Make sure you mark the cement pad where you want the columbarium. It can be very costly if you need to move the columbarium after it has been placed.
8. After marking the cement pad with the location, position the tiles and shims in the correct spot so you can remove the straps. The number of tiles and adhesive caulk points is based on the size of the columbarium. Call for a personalized recommendation.
 - a. Note: Without shims and tiles, the straps will be stuck underneath the columbarium due to the weight of the columbarium

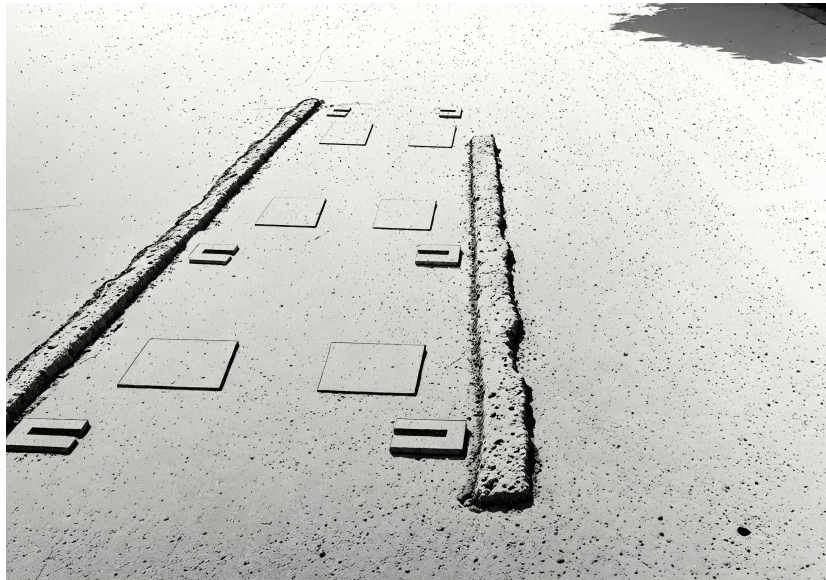


9. Check the shims to make sure you are level on both sides of the columbarium

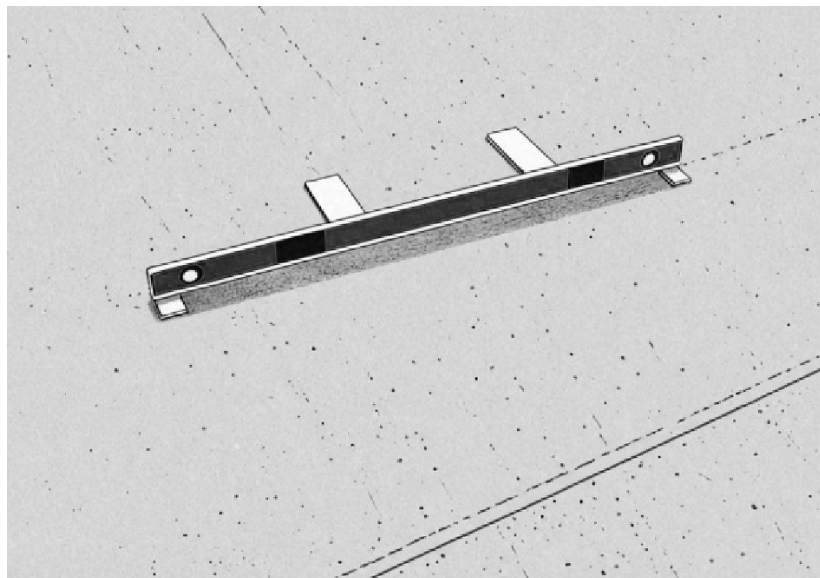


10. Now you are ready to install your mixture of mortar in the front and back edge of your columbarium. Use your template lined chocked on your cement pad for your mortar positioning



11. Use your epoxy based anchoring adhesive. Please call for recommended adhesive referral
12. Install the epoxy on both the cement and tiles

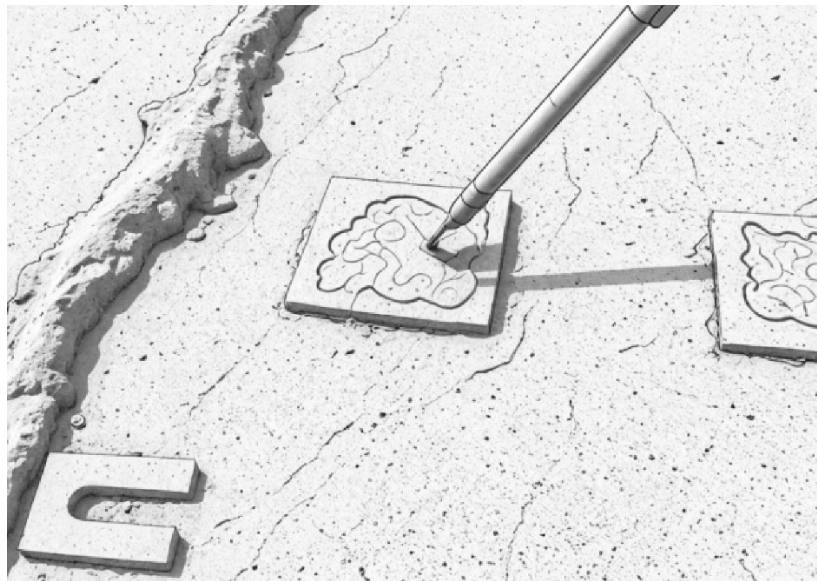

13. After completing these tasks, you are ready to put the columbarium in place. We recommend 2 people on each side of the columbarium as well as using a skilled crane operator. Lifting straps should be at the edge of each corner to be easily removed.
14. Final placement should be checked and reviewed by all parties before lowering the columbarium onto the cement pad. Check your mortar, adhesive and tiles are in the correct place on the cement pad.

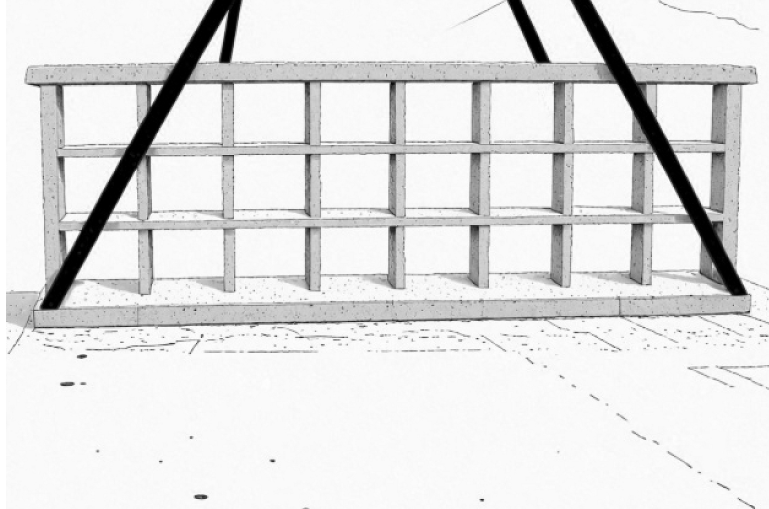

15. Check all individuals to make sure all feet and fingers are not near the edge of the columbarium. This step is to ensure the safety of all individuals.
16. You're ready to set your columbarium in its final position. Instruct your crane operator to lower the columbarium.
17. After the columbarium is in place you need to do your mortar finish work around the columbarium. The mortar takes several days to cure. Make sure your mortar maintenance installer does a visual check all the way around the columbarium and is ready for a finished look



18. This completes your installation placement of your columbarium. Refer to the door installation guide when you are ready.

